

Removing Jammed CD's from GL1800 CD Changer.

First of all: Do NOT use homemade CDs with stick-on labels.

Commercial disks and homemade are ok if just plain CDs are used w/o paper stick-on labels
Tolerances are close in the changer and paper labels can absorb moisture and swell up causing a jam.

The following procedure worked for me when my CD changer jammed on a hot day. (82 – 84 deg's)

Step-1 Open trunk and pull changer top cover towards rear of bike and lift up. Fig's-1 & 2

Step-2 Turn ignition switch to ACC position. Fig-3

Step-3 Push one of the number buttons on changer unit to select a CD to be removed. Fig-4

Step-4 Push the EJECT button on changer and listen for changer to cycle. Fig-5

If disk won't eject, do the following....

Push EJECT button and while changer is attempting to eject, look into the slot for the edge of the CD.
(The door should be open.) Use a flashlight to look into the slot as the CD may be down inside the slot a ways.

Use a thin piece of wood or thin screwdriver to "GENTLY" nudge the CD inward and slightly downward allowing the CD to move outward. (This should be done while changer is making the eject cycle noise.)

See Fig-6

NOTE: Use care not to damage the CD or the internal mechanism of the changer. The CD should not be more than a half inch or less inside the slot.

Eject other CDs by performing step-3 and step-4



Fig-1



Fig-2



Fig-3



Fig-4



Fig-5



Fig-6